



RW RACING

D20 Heritage Business Park,
Heritage Way, Gosport, Hants, PO12 4BG
Tel: 02392 588001


Speedmind Tools and Set-up Systems

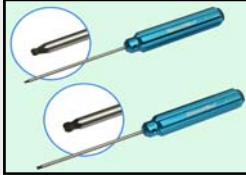


BW-200 (2.0mm)
BW-250 (2.5mm)
BW-332 (3/32")
Ball type Wrench.

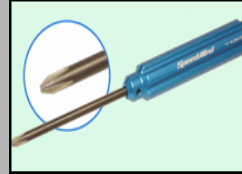


PW-301 (3 x 100mm)
PW-401 (4 x 100mm)
PW-501 (5 x 100mm)
Precision Phillips
Screwdriver.

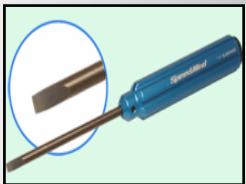

NW-301 (3 x 190mm)
NW-401 (4 x 100mm)
NW-501 (5 x 100mm).
Precision Slotted Screw
Driver.

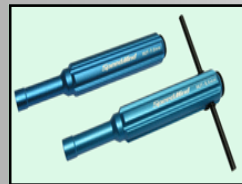

NW-450 (4.5mm M2 nuts)
NW-550 (5.5mm M3 nuts)
NW-700 (7.0mm M4 nuts)
NW-800 (8.0mm glow plugs)
Metric Nut Wrenches.

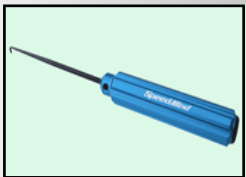

CW-301
Special Manifold and Clip
Wrench Tool.



GW-025
6 Spoke Setting Wheels for
Touring Cars, 4 pieces.




DG-10B (Blue)
DG-10BK (Black)
DG-10P (Purple)
Precision Chassis Droop
Gauge, -3mm to 10mm.




GW-022B (Blue)
GW-022BK (Black)
GW-022P (Purple)
Precision Ride Height
gauge.




SB-10B (Blue)
SB-10BK (Black)
SB-10P (Purple)
Support Block for Droop
Gauge, 2 pieces.

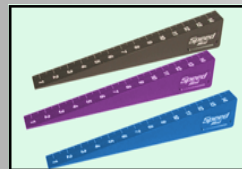

RG-10B (Blue)
RG-10BK (Black)
RG-10P (Purple)
Precision Aluminium Ride
Height Gauge, Linear Type.

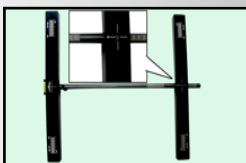

PT-200B (Blue)
Universal Tweak Master 2.

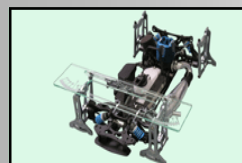

PSU-1000BK (Black)
1/10th Touring Car Universal
Set-up System.

Website: www.speedmind.net
Website: www.rwracing.co.uk
Email: neil@rwracing.co.uk